

---

## YG600 Lens Replacement

This Replacing instructions only refer to YG600. The illustrations may differ from your product, please refer to user manual for accurate instructions on how to replace the projector lamp on your model or contact your dealer.

- A Be sure to turn off and unplug the projector , power off for at least 15 minutes before replacing
- B To prevent dust to enter the projector, please use a soft clean cloth to remove surface dust.
- C Make sure the working environment is Dry and Clean.
- C For a safer operation, you should wear an antistatic wrist strap while replacing.  
(An antistatic wrist strap is any device that reduces, dampens, or otherwise inhibits electrostatic discharge)

If there is an air gun or other auxiliary tools, please pay attention to whether there is water or water droplets in the nozzle/working environment of the product.

Do not allow any water gets into the projector interior while cleaning or replacing.

If the water drops inside of the projector, it may cause further damage to the product. Once the internal electronic part is exposed to moisture, it is likely to cause a short circuit.

(NOTE: This will avoid warranty and cost will pay)

Projector is a household entertainment electronic product.

Please handle the replaced components according to the requirements of each country for e-waste.

Repair video operation, you can watch link:

#aaotechsupport @aaotechsupport

Replace Guide Manual, go here to download:

[www.hiaao.com/download](http://www.hiaao.com/download)

---

Spots on a screen could affect the display quality, the usual causes of this are dust and drip particles that have accumulated on a projector's Screen panel.

To solve this issue, usual treatment is to remove the dust / drip particles from the projector Screen Panel, Dust removal operation of the screen, is necessary to operate in the working state of the whiteboard.

Go here to download the whiteboard (800\*480):

[www.hiaao.com/download](http://www.hiaao.com/download)

You only can contact us about the product diagnosis, we will have a professional technical support team to diagnose YG/GM/S series projector. For spare parts of the product, please contact your dealer or seller directly.

aa0 Tech Support

Engineer Xie / Translator Eric

Tools:

3.5M Screwdriver



Lens Replacing part




Antistatic Wrist Strap




---

1. Flip the projector onto its back and lay flat, remove the 6 screws.

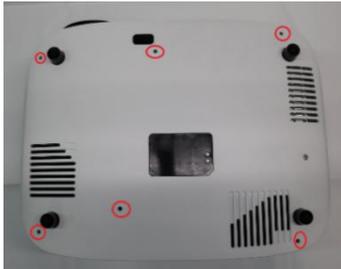


2. Gently pry the cover up by finger or tools, turn it over and remove the button cable.


(Caution: when turning the cover over, take care of the button cable connected with the cover, if excessive force, the button cable may break)

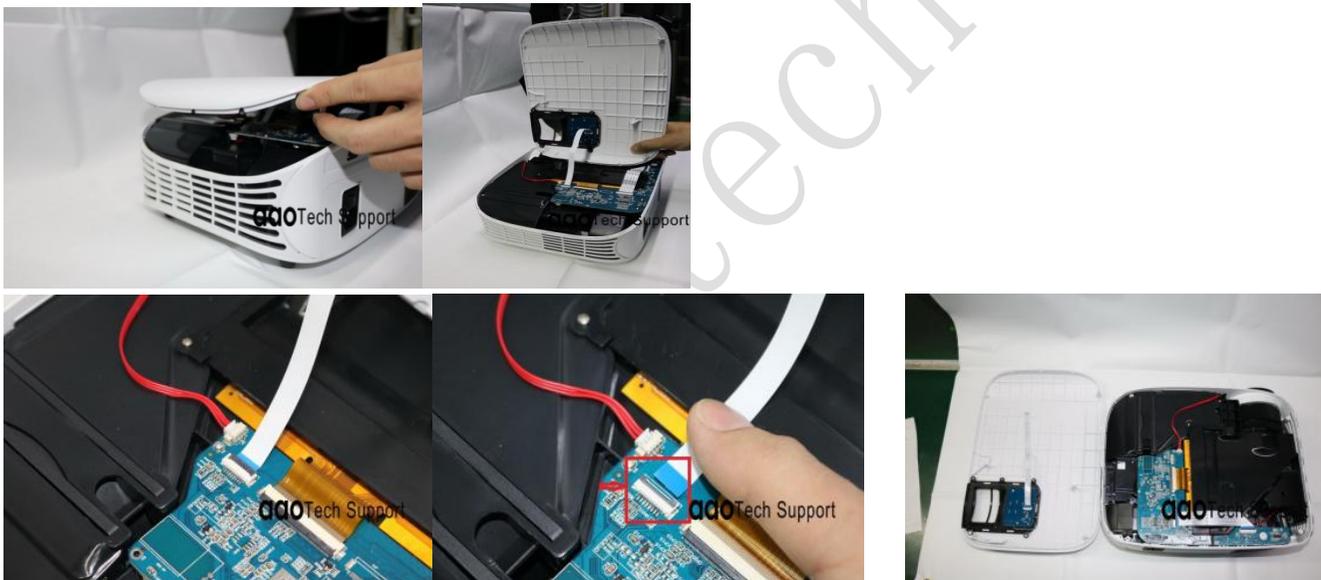

3. Remove the ribbon cable on the AV board, then fold it to the left.

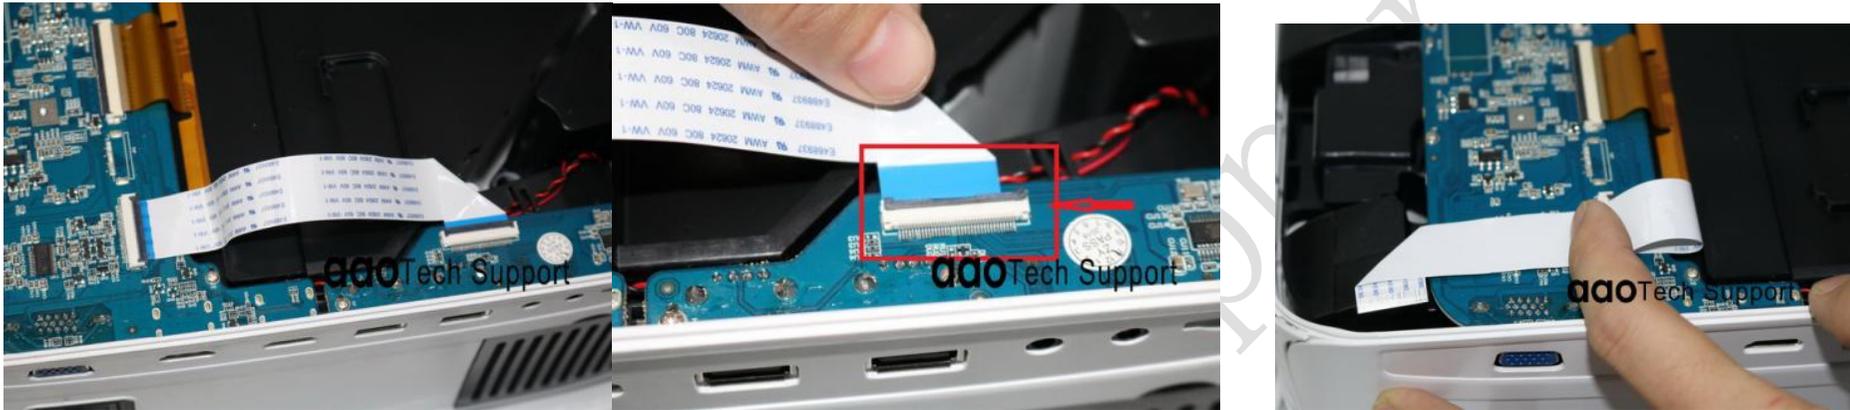


4. Remove the four screws on the light path board (small), then remove the light path board. (small)

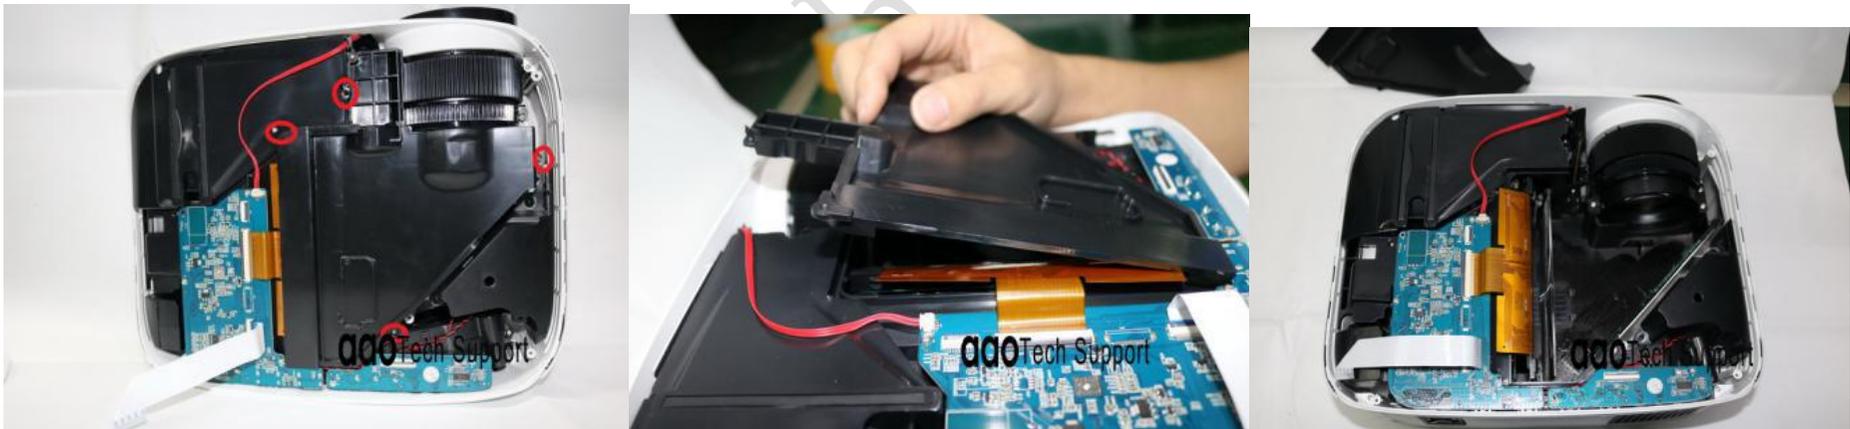

5. Remove the 3 screws beside the lens .



6. Remove the Lens : Don't pick up the keystone correction wheel, just press the keystone correction wheel on the picture. Gently lift it up and remove it.

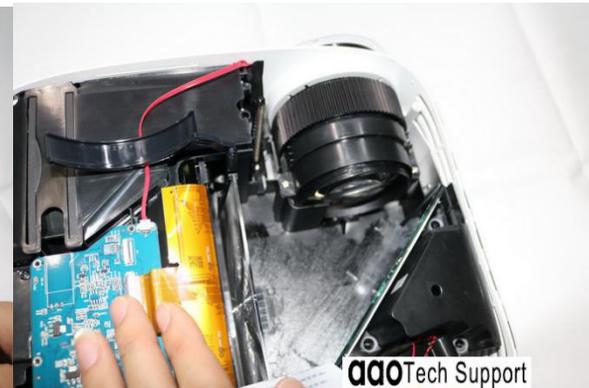

**7. Note: Must turn the lens focus wheel to the left as picture 1; Remove the whole lens like the gesture of picture 2**



**8. Recover the Lens Put the lens back in place like picture 1, then screw the focus wheel to the right like picture 2;**



9. Re-Put the keystone correction wheel back in place.




10. Recover the 3 screws beside the lens




11. Remove the lights path cover, screw back the 4 screws .



12. Re-Plug the ribbon cable

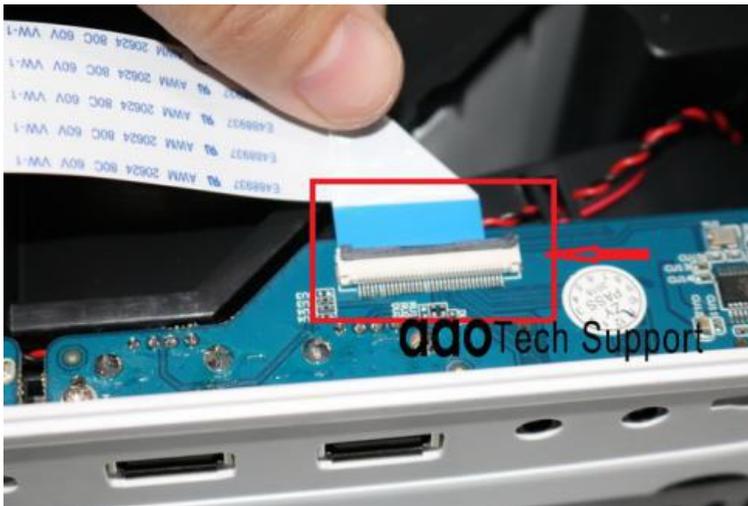

**13. Recover the button cable.**

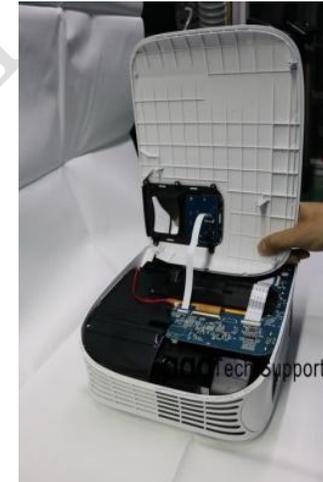

**14. Cover the top cover. Recover the 6 screws at the bottom**

